

TECHINCAL DETAILS

OF

detectMASTER III™(300mm) *(Needle Detector for Furnishing fabrics)*

1. INTRODUCTION

The minute pieces of broken needles in the baby garment can be dangerous to the health as the babies cannot tell if they are hurt with broken particle. So in order to avoid any mishappening, certain countries (for e.g. Sweden, Japan etc.) have made it mandatory that whatever any under garment or baby garments enters their country, needs to be passed through the needle detector machines. It is with due consideration to this requirement and our moral responsibility towards the human race that we, at PARAMOUNT, have introduced *detectMASTER III™* for the Garment Industry.

2. EQUIPMENT

Paramount's *detectMASTER III™* is a Single Channel Equipment, with advanced electronic circuitry having latest control panel, which eliminates all chances of the broken needle parts to escape . It can detect any Iron particle as small as 2.5 mm. Instead of the conventional 8 Magnetic sensors, *detectMASTER I™* is a 10 Sensor Unit which ensures its accuracy and dependability. The lightening indicator on the digital control panel makes it convenient for the operator to find the location of the broken needle. Further the Digital Counter on the panel can also calculate how many units have successfully passed the test and how many have failed. It also gives the total number of items tested on the unit.

The *detectMASTER III™* works on the magnetic induction principal. The Equipment has a detection width of 600 mm with an effective detecting height of 300 mm.



Corporate Member




An ISO 14001 : 2004 Group
We Care for our Environment !



मानक- पथप्रदर्शक-
Member : Bureau of
Indian Standards

3. DETAILS OF THE MAIN UNIT OF *detect*MASTER III™

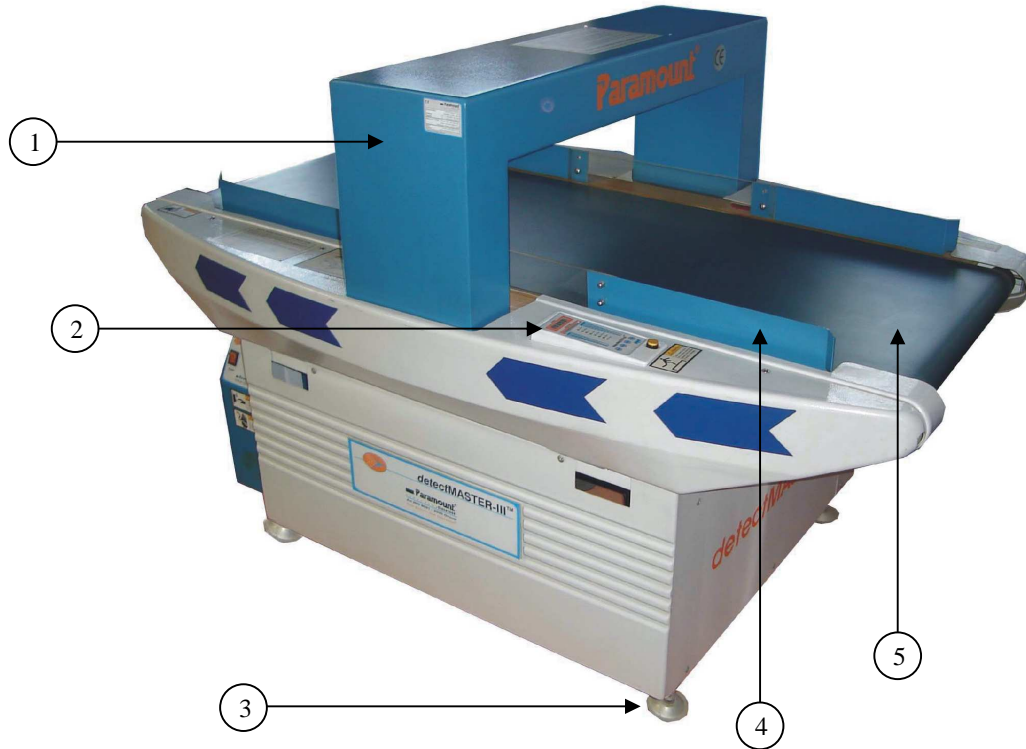

1. Detecting Channel – 1.
2. Feather Touch Control Panel.
3. Foot Rests.
4. Acrylic Cover.
5. Conveyor Belt.

4. DETAILS OF THE ACCESSORIES SUPPLIED WITH *detectMASTER III™*



Main Unit



Double end Spanner
(30 – 27 mm)



Ferrous Ball (Ø 2.5 mm)
(To check the sensitivity of the Equipment)



Extra Fuse (6 Amp.)




Allen Key (6 mm)



Screw Driver



This User's Manual

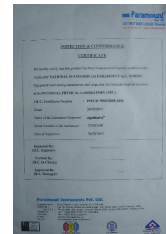

Inspection & Conformance Certificate

detectMASTER III™ is Supplied Complete with below Accessories:

Main unit	: 01 No.
Allen Key (6 mm)	: 01 No.
Spanner (for Foot Rests)	: 01 No.
Extra Fuse (6 Amp.)	: 01 No.
Screw Driver	: 01 No.
Ferrous Ball (φ 2.5 mm) to check the sensitivity of the Equipment	: 01 No.
This User's Manual	: 01 No.
Inspection & Conformance Certificates	: 01 No.



Corporate Member



An ISO 14001 : 2004 Group
We Care for our Environment !



Member : Bureau of Indian Standards

5. SALIENT FEATURES

- Specially designed instrument to detect broken needle or any ferrous particles in a garment.
- Latest model with modern aesthetics.
- detectMASTER III™ works on the magnetic induction principal.
- The smallest ferrous particle it can detect is 25 mm.
- Product width up to 600mm can be easily checked in this machine.
- Garments up to 300mm thickness can be easily checked.
- An alarm sounds at the detection of any broken needle & the belt stops and comes back to its original position.
- Specially designed Caster wheels at base for easy movement of the machine.
- Complete with all accessories along with Φ 2.5 mm card to check calibration.
- Supplied with inspection & conformance certificates.

6. TECHNICAL DETAILS OF *detect*MASTER III™

Purpose	: To detect broken needle (Fe) parts.
MODEL	: detectMASTER III™
Purpose	: To detect broken needle (Fe) parts.
Channel / Probe Type	: Single Sensor / Channel Type
Needle Detecting Capability (Fe)	: 2.5 mm
Detecting Width Height	: 300 mm
Detecting Width (Conveyor Belt)	: 600 mm
Conveyor Belt (Length)	: 2200 mm
No. of Detecting Sensor	: 10 Nos.
Alarm Method	: Buzzer and Belt Stops
Alarm Sound	: An alarm sounds at detection of any broken needle Particle or Iron (Fe) Piece
After Detection	: The conveyor belt stop automatically and come back to its original position.
Power Consumption	: 60 Watts / Per Hour
Power Supply	: 220V, Single Phase 50 Hz. (Also available 110V, Single Phase 60 Hs.)
Space Required.	: Minimum 4 feet. around machine free from Vibrations as the machine is highly sensitive to surrounding vibration.



Corporate Member



An ISO 14001 : 2004 Group
 We Care for our Environment !



Member : Bureau of Indian Standards

Dimension (Net) : 1050 (L) x 1650 (W) x 900 (H) mm
41 (L) x 65 (W) x 34.5 (H) inch
Net Weight of the unit : 200 Kg. (440 lbs).

NOTE : With our constant endeavour to improve & excel, we reserve the right to alter the specification or modify the appearance without notice.



An ISO 14001 : 2004 Group
We Care for our Environment !

